

## Installation Instructions

## Nissan Rogue 2008-13

### HARDWARE KIT

3 – Large Bumpons	4 – Clip Bodies
3 – Center Supporting Clips	4 – ‘ L ’ Brackets
3 – # 8 x 7/16” Black Screws	4 – Pins
4 – 3M Anti-Abrasion Film Pads	4 – # 6 x 5/8” Flat Head Screws

### TOOLS REQUIRED

1 – Phillips Screwdriver # 2
1 – Tape Measure



1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
2. Install the bumpons as shown in *Illustration #1*. **Attention: The bumpons must be installed on the hood, not on the protector!!!** If the bumpons are installed on the protector, they will wear through the paint.
3. Install the three (3) Center Supporting Clips over the hood edge and position according to measurements shown in *Illustration #2*. Be sure the clips are fully seated against the hood edge.
4. Place the protector on the hood and align the center hole in the protector with the hole in the supporting clip at the center location. Start a #8 x 7/16” Black screw into the supporting clip. **Do not tighten the screw until Step #7.**  
Ensure the protector is well centered on the hood using the hood edges as a reference. Adjust the two remaining Center Supporting Clips as necessary on the hood edge to align with the remaining holes in the protector, and start a #8 x 7/16” Black screw into each of the supporting clips. **Do not tighten the screw until Step #7.**
5. With the protector centered on the hood, peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the four (4) outer holes in the protector. *See Illustrations #3 – Step #5.*
6. a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #3 – Step #6a*.  
b) Insert a pin through the protector into each of the clips. *See Illustration #3 – Step #6b.*  
c) Insert a #6 x 5/8” screw through an ‘L’- bracket and into the clip. *See Illustration #3 – Step #6c & 6d.*  
d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
7. Tighten all (3) three #8 x 7/16” Black Screws into the Supporting Clips installed in step #4. **Do not over tighten.**
8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.  
**Note: Do not pull on the protector when opening or closing the hood.**

### CARE INSTRUCTIONS

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the protector is secure. **Avoid using automatic car washes.** Do not pull on protector when opening or closing the hood.

Illustration #1 – Bumpons Placement

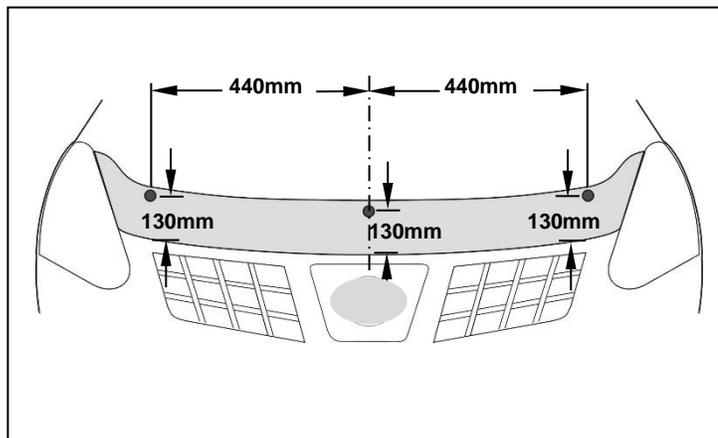


Illustration #2 – Center Supporting Clip Placement


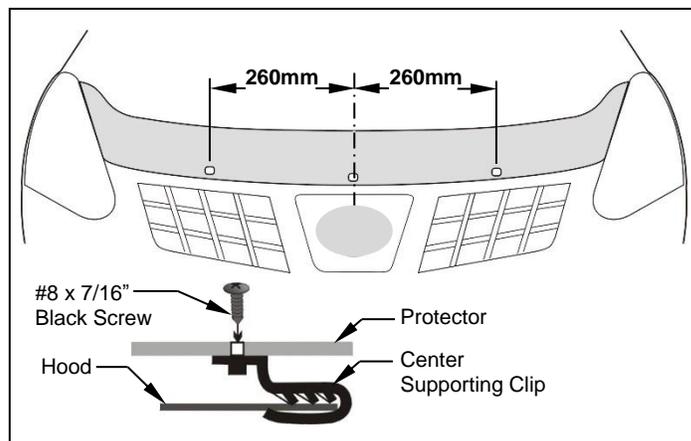


Illustration #3 – Clip Configuration – Patent No. 6,892,427

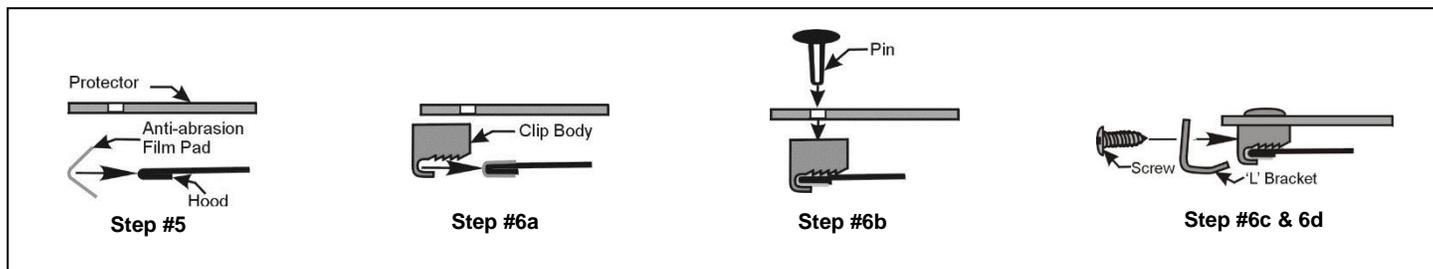

Thank you for purchasing a hood protector. Retain sheet for Care Instructions and Kit Information.

### Sachet des fixations

- |                                    |                                       |
|------------------------------------|---------------------------------------|
| 3 – Grosses butées                 | 4 – Agrafes noires                    |
| 3 – Agrafes de support de centrale | 4 – Braquets en forme « L »           |
| 3 – Vis noires (n°8 x 7/16 po.)    | 4 – Épingles noires                   |
| 4 – Tampons anti-abrasifs 3M       | 4 – Vis à têtes plate (n°6 x 5/8 po.) |

### Outils requis

- 1 – Tournevis à embout étoilé (n°2)
- 1 – Ruban à mesurer



1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Déclencher le capot mais ne pas l'ouvrir.
2. Installer les butées tel qu'indiqué à l'illustration n°1. **Attention: Les butées doivent être installées sur le capot et non sur le pro** butées sont installées sur le protecteur, elles useront la peinture.
3. Installer les trois (3) agrafes de support de centre au-dessus du bord de capot et les placer selon des mesures montrées dans l'illustration n°2. Être sûr que les agrafes sont entièrement posées contre le bord de capot.
4. Placer le protecteur sur le capot et aligner le trou central dans le protecteur avec le trou dans l'agrafe de support à l'endroit central. Vis noire commencer de #8 x 7/16 po. dans l'agrafe de support. **Ne pas serrer la vis jusqu'à l'étape n°7.** Assurer le protecteur est bien porté sur le capot en utilisant les bords de capot comme référence. Ajuster les deux agrafes de support de centre restant selon les besoins sur le bord de capot pour aligner avec les trous restants dans le protecteur, et vis noire commencer de #8 x 7/16po. dans chacune des agrafes de support. **Ne pas serrer la vis jusqu'à l'étape n°7.**
5. Peler et plier en deux les tampons anti-abrasifs sur la bordure avant du capot en dessous des (4) four trous extérieurs. Voir les illustrations n°3 – étape n°5.
6. a) Monter une agrafe sur chaque tampon anti-abrasif sur la bordure du capot. Voir l'illustration n°3 – étape n°6a.  
b) Insérer une épingle au travers du protecteur et dans l'agrafe. Voir l'illustration n°3 – étape n°6b.  
c) Insérer une vis (n°6 x 5/8 po.) au travers du braquet en forme «L» et dans l'agrafe. Voir l'illustration n°3 – étape n°6c et n°6d.  
d) S'assurer que tous les composants sont bien installés sur le capot et serrer les vis dans les agrafes.
7. Serrer les trois vis noires (n°8 x 7/16po.) dans les agrafes de support agrafes installées dans l'étape 4. **Ne pas trop serrer.**
8. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et/ ou la fermeture du capot pour obtenir un bon dégagement. **Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.**

### Instructions pour l'entretien

Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ni de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Éviter de laver le véhicule dans une lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Illustration n° 1 - Emplacements des butées

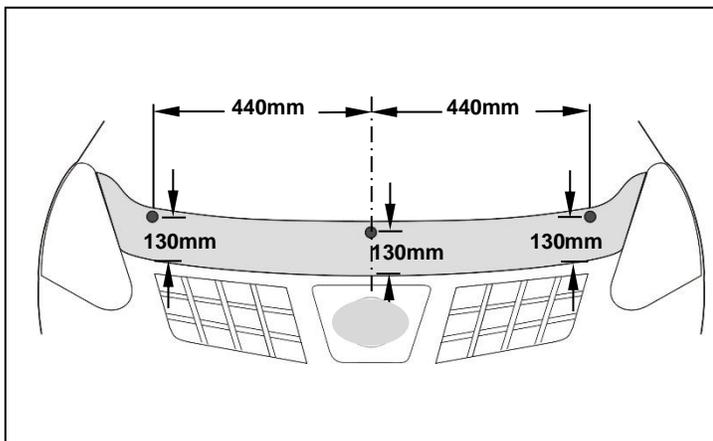


Illustration n° 2 – Assemblage


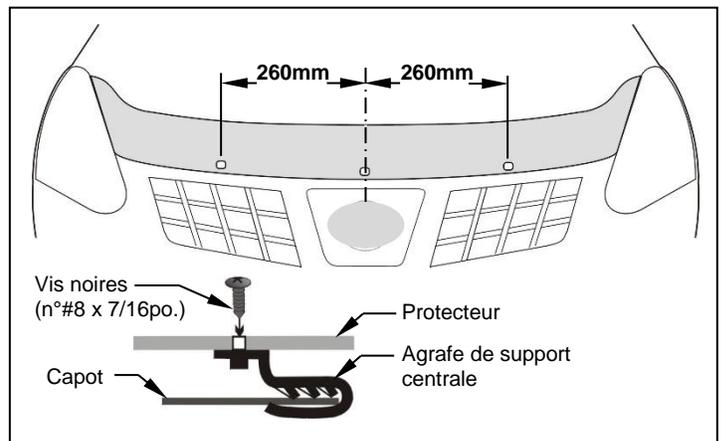


Illustration n° 3 - Configuration de l'agrafe – N° de brevet : 6,892,427

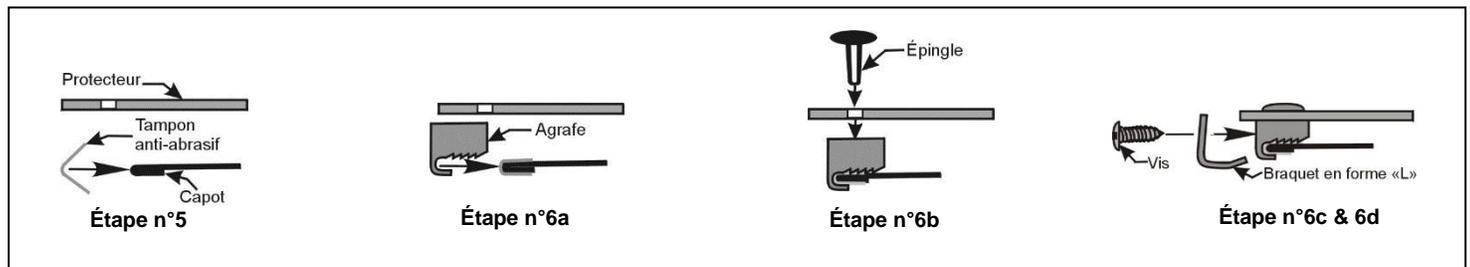

Merci d'avoir acheté un protecteur de capot a  
Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.