

# INSTALLATION INSTRUCTIONS

ACURA 1.7 EL 2001 - up

1C 01

## Hardware Kit

- 4 – Plastic Expansion Plugs
- 4 – #10 x 1/2" Pan Head Screws
- 4 – 3M Anti-abrasion Film Pads
- 4 – #6 x 3/8" Black Truss Head Screws
- 4 – Black 'C' Clips
- 4 - #4 x 3/16" Black Pan Head Setscrews
- 2 – Large Bumpers

## Tools Required

- 1 – Phillips Screwdriver




## Installation


1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Center the deflector on the hood then insert the expansion plugs through the holes in the deflector and into the hood. *See Illustration #1.* Be sure that all the components are well seated into the hood, then tighten the #10 x 1/2" screws into the expansion plugs. **Do not over tighten.**
3. Attach the anti-abrasion film pads to the hood in line with the holes in the leading edge of the deflector. Fold the pads in half over the hood edge to cover at least 1/2" of the underside of the hood. *See Illustration #2.*
4. Slide the 'C' clips over the edge of the hood in line with the holes in the deflector. Be sure that the 'C' clips are well seated against the hood; it may be necessary to tap on the clips. *See Illustration #2.*
5. Be sure that the hole in the top of the clips lines up with the hole in the deflector, then tighten the #6 x 3/8" screws through the deflector and into the 'C' clips. **Do not over tighten.** *See Illustration #2.*
6. Make sure all the clips are well seated against the hood. Tighten the setscrews in the back of the clips.
7. Install the two (2) bumpers as shown in *Illustration #1 and #3.* **Attention: The bumpers must be installed on the hood not on the deflector!!!!** If the bumpers are installed on the deflector, they will wear through the paint.
8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

**Note: Do not pull on the deflector when opening or closing the hood.**


## Illustration # 1: Hardware Assembly

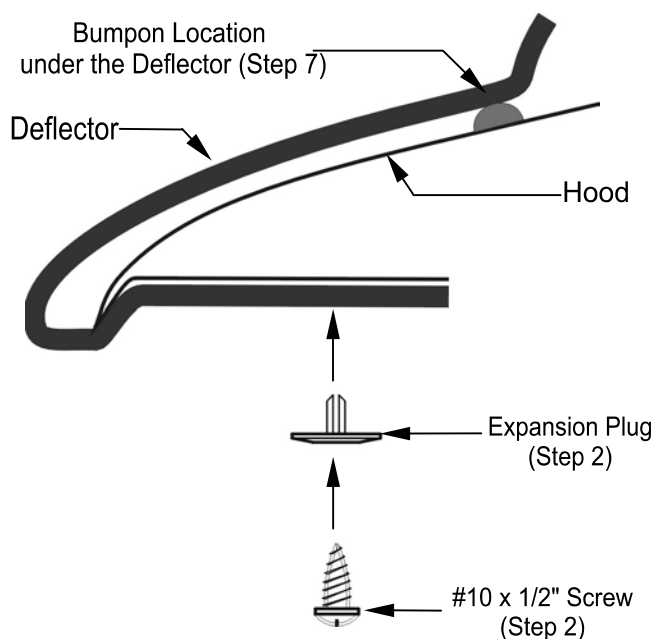

## Illustration # 2: 'C' Clip Installation – steps 3 to 6

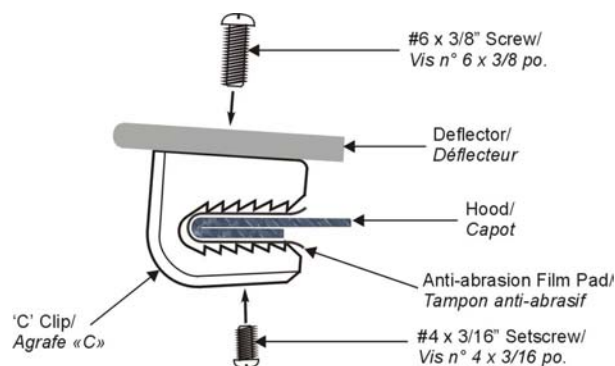

## Illustration # 3: Bumper Location

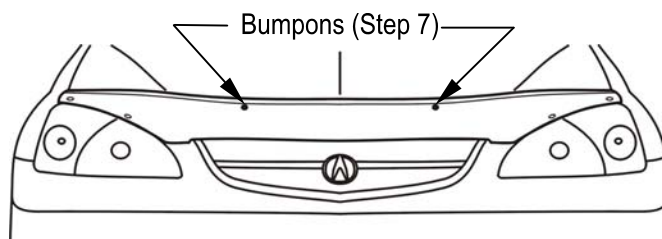

## Care Instructions

**Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents.**

Periodically check to make sure the bumpers are in place and the deflector is secure.

**Avoid using automatic car washes.** Do not pull on the deflector when opening or closing the hood.

Thank you for purchasing a hood deflector.

Retain this sheet for care instructions and hardware kit information.

Rev1.010806

# INSTRUCTIONS D'ASSEMBLAGE

ACURA 1.7 EL 2001 – plus

1C 01

## Sachet de fixations

- 4 – Bouchons expansibles en plastiques
- 4 – Vis pour tôle à tête fraisée (n° 10 x 1/2 po.)
- 4 – Tampons anti-abrasifs 3M
- 4 – Vis cylindriques (n° 6 x 3/8 po.)
- 4 – Agrafes noires «C»
- 4 – Vis cylindriques (n° 4 x 3/16 po.)
- 2 – Grosses butées

## Outils requis

- 1 –Tournevis à embout étoilé (Phillips)




## Installation


1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Ouvrir le capot du véhicule.
2. Centrer le déflecteur sur le capot puis insérer les bouchons expansibles dans les trous du déflecteur et ceux du capot. Voir l'illustration n° 1. S'assurer que tous les composants sont bien installés au capot puis serrer les vis n° 10 x 1/2 po. dans les bouchons expansibles. **Ne pas trop serrer.**
3. Installer les tampons anti-abrasifs alignés avec les trous de la bordure avant du déflecteur. Plier les tampons anti-abrasifs en deux pour couvrir au moins 1/2 po. en dessous du capot. Voir l'illustration n° 2.
4. Glisser les agrafes «C» au-dessus de la bordure du capot pour s'aligner avec les trous du déflecteur. S'assurer que les agrafes «C» sont bien fixées contre le capot: Il peut être nécessaire de pousser sur les agrafes «C» pour qu'ils siègent bien au capot. Voir l'illustration n° 2.
5. S'assurer que le trou sur le dessus des agrafes «C» s'aligne avec le trou du déflecteur. Insérer les vis (n° 6 x 3/8 po.) au travers du déflecteur et des agrafes «C». **Ne pas trop serrer.** Voir l'illustration n° 2.
6. S'assurer que les agrafes sont bien installées sur le capot. Serrer les vis (n° 4 x 3/16 po.) en arrière des agrafes.
7. Installer les deux (2) butées tel qu'indiqué à l'illustration n° 1 et 3. **Attention: Les butées doivent être posées sur le capot et non sur le déflecteur!!!!** Si les butées sont installées sur le déflecteur, elles endommageront la peinture.
8. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et/ ou la fermeture du capot pour obtenir un bon dégagement.

**Important: Ne jamais se servir du déflecteur pour ouvrir ou fermer le capot.**


### Illustration n° 1 : Assemblage

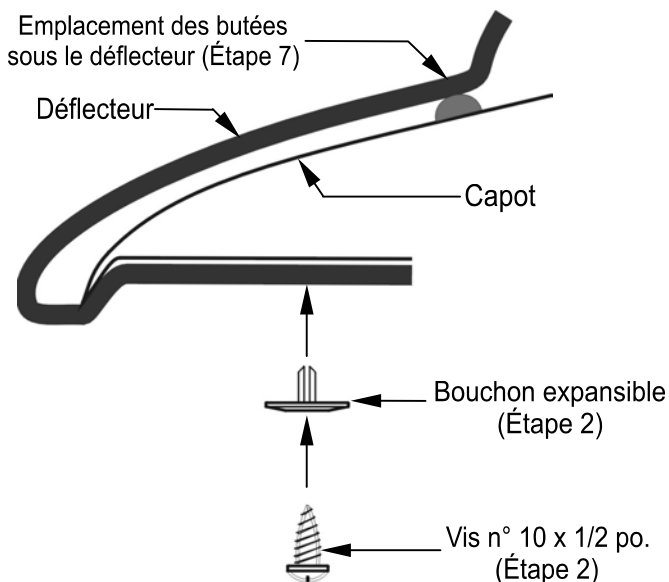

### Illustration n° 2 : Configuration de l'agrafe (étapes 3 à 6)

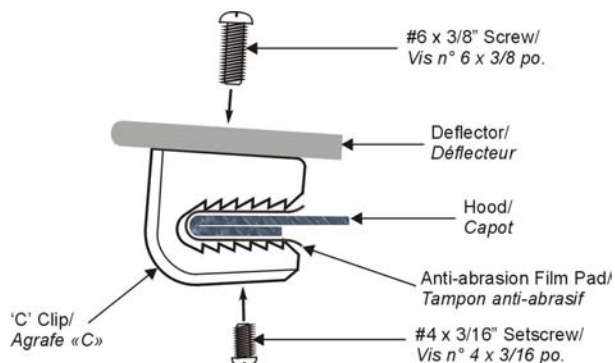

### Illustration n° 3 : Emplacement de butées

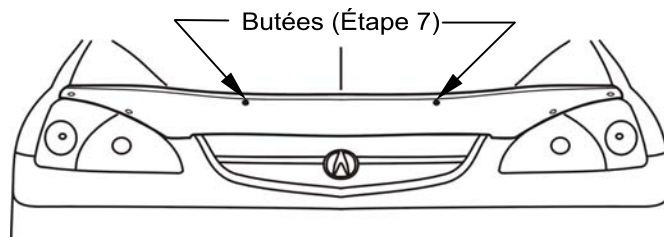

## Instructions pour l'entretien

**Nettoyer le déflecteur avec une solution d'eau et de savon doux ou avec un nettoyant de plastique seulement.**

**Ne pas utiliser de produits chimiques ou de dissolvants.** Périodiquement s'assurer que les butées sont toujours en place et que le déflecteur est toujours bien retenu. **Éviter de laver le véhicule dans un lave-auto automatique.** Ne pas tirer sur le déflecteur pour ouvrir et fermer le capot.

Merci de vous être procuré un déflecteur.

Conserver cette feuille pour connaître les instructions d'entretien et les renseignements concernant le nécessaire d'installation.